## 點對點無線網路設定(V5.02版)

設定時須針對投影機上之資訊來做設定。

◆ 步驟一 (參考圖一)



1.電腦開啟 LIVEVIEWER 程式,選擇 Configure Manually。

- 2.在無線網路前的方框打勾。
- 3.點選 Next 按鈕進行下一步。

Projector Connection			X	
Select the option that de C Select From List C Enter Passcode	escribes the connectio Please select the net to use.	n method you would work adapter that you	like to use: u are going	
<ul> <li>Profile</li> <li>History</li> </ul>	Connection Name	Adapter Name Broadcom NetLink (	TM) Gig.	
• Configure Manually	▼ 無線網路連線	Dell 無線 1397 WLA	N Mini 卡	
(Unregistered)				
		Next >	Exit	<u>R</u> -

- ◆ 步驟二 (參考圖二、圖三)
- 1. 進入投影機 MENU 選單->網路->無線資訊,可顯示無線設定的各種資訊 (如圖二)。
- 注意:無線資訊中模式必須為 ADHOC,加密必須為關閉。

若模式並非 ADHOC, 請進入 MENU 選單 -> 網路 -> 無線設定 -> 模式 中設定。

若加密並非關閉,請進入 MENU 選單 -> 網路 -> 無線設定 -> 加密中設定。

2. 在無線資訊中尋找 SSID 之名稱,接著在 SSID 欄位輸入此名稱。 或在無線設定中將 SSID 改為預設值 wireless,然後在 SSID 欄位輸入 wireless。

1

- 3. Encryption(加密)欄選擇 OFF, Encryption key(加密密碼)欄空白。
- 4. Mode(模式)選擇 ADHOC。
- 5. 點選 Next 按鈕進行下一步。

№ 無線資訊-1			
密碼 投影機名稱 見位如路通 可設開道 DNS SERVER MAC位址 時差 定期和時間 類溜密 SSID 通信速度 ①返回	, ●: 關閉	N937-1J3R-QRGF WLAN-X4014WN ADHOC 192. 168. 0. 175 255. 255. 255. 0 192. 168. 0. 1 192. 168. 0. 1 20-10-7A-3A-4B-OF GMT+08:00 2011/1/1 0:00 6 關閉 wireless 11.0 Mbps , :下一步	

모	·
回	

		SSID	MAC address	<b>^</b>
		🔲 dlink	1CBDB9ABB240	
		P874	5067F012C6BD	
	Find		5067F012CF06	Ŧ
Encryption	:	OFF	▼	
Encryption ke	ey :			
Mode	:	AD-HOC	•	
Enter the Wi	roloss Dro	iector Configuration	information	

\_\_\_\_\_

## ◆ 步驟三 (參考圖四)

- 1. 將投影機無線資訊中的 IP 位址 輸入軟體中的 IP address 欄位。
- 2. 輸入完後請點選 Add 按鈕。
- 3. 將投影機無線資訊中的子遮罩 數字輸入軟體中的 Subnet mask 欄位。
- 4. 點選 Connet 按鈕進行連線。

Projector Connection			X
Please select the proje	ector that you are going to conne	ect.	
IP address :	192 . 168 . 10 . 254	Add	
	192.168.10.254		
此為範例請依照	投影機中的無線資訊輸入		
		Delete	
Subnet mask :	255 . 255 . 255 . 0		
Enter Projector IP Ad	tress and Subnet mask.		
Encer Projector I Pro-			

- ◆ **步驟四** (參考圖五)
- 1. 點選 YES 按鈕。

Projector	Connection					X
Do you v	vant to apply s	suggested ne	twork setti	ngs as follows?		
IP ad Subn	dress et mask	: 192.168. : 255.255.	0.193 255.0	Change	Tanat	
🗖 Not d	lisplaying confir	mation dialog	) for adding	Network settin	gs.	
			L	Yes	No	

- ◆ 步驟五 (參考圖六)
- 1. 點選 Show 按鈕。
- 2. 開始投影。

Projector Connection			x		
Connection list					
IP address	Projector name	Status			
☑ 192.168.0.175	WLAN-X4014WN	LAN			
Register this setting Select the projector to	to My Connection send your computer ir	nage, then click [!	Show] button.		
Automatically change the input source LAN channel, if different channel is selected. If Slideshow is running, Slideshow is terminated and change the input source to LAN channel.					
		Show	Close		

## 四分割投影

當多台電腦連接時,可做影像的四分割投影。



- 2. 不同的 USER 拖曳至左方四分割區塊。
- 3. 在對應的區塊點擊左鍵。
- 4. 當區塊變為藍色,即可開始投影。





